


Netac

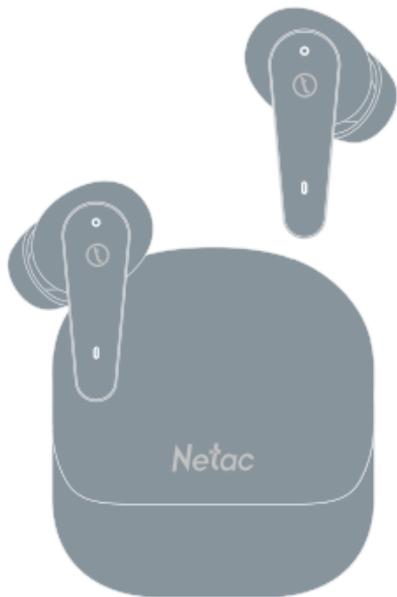

TW02A

无线耳机说明书

Wireless Earbuds Instructions

包装内容



TW02A × 1对



USB-C型充电线x1



充电盒 x1



耳帽:S X 1对,L X 1对

用户手册 x1

规格参数

- 型号:TW02A
- 充电仓电池:600mAh
- 充电时长:2H
- 扬声器单元: ϕ 11mm
- 输入:DC5V=350mA
- 耳机电池:40mAh
- 播放时间:7H(耳机) +42H(充电仓)
- 产品重量:45 \pm 10g
- 蓝牙距离:15M

充电仓规格

- 充电仓重量:41.5g
- 充电口:USB-C

开关

开机:当你打开充电仓时,耳机就会自动连接。

关机:将耳机放回充电仓,耳机自动断开连接。

蓝牙配对

1. 打开充电盒。
2. 打开您的设备的蓝牙功能。
3. 选择“添加设备”，并从列表中选择安装设备时选择“Netac TW02A”。
4. 你的Netac TW02A现在已经与你的设备连接，
可以开始使用。



注意：你的Netac TW02A从机仓取出后将会自动连接到最后一个配对的设备。

恢复出厂设置

- 确保你的耳机已经充满电了。
- 在您的配对设备上，从蓝牙菜单中的配对设备列表中删除/移除Netac TW02A。
- 从充电盒中取出任一耳机。
- 未连接配对设备状态下，长按任一耳机10秒，红白灯同时闪烁3次后，提示“Factory reset successful”然后关机。
- 将耳机放入充电盒内，并重复配对过程。

请选择耳塞尺寸

按照插图学习如何正确佩戴耳塞。



耳塞配有中等尺寸的耳塞。

但是,如果您发现它们不太合适,请取下它们并尝试小号和大号耳塞

耳机充电

将两只耳机放入充电盒内,即可为耳机充电

耳机充电显示

- 红色LED灯常亮=正在充电



Charging

耳机仓充电

通过提供的 USB-C 充电线为充电仓充电,也可通过手机充电器,笔记本电脑或PC充电器

充电仓充电显示

- 红色LED灯闪烁=正在充电



Charging

- 红色LED灯常亮=电量充满



Fully Charged

操作



播放/暂停

轻触任一耳机两次



..

轻按两次



..

轻按两次



上一曲

轻触左耳机三次



...

轻按三次



下一曲

轻触右耳机三次



...

轻按三次



音量+

轻触右耳机一次



.

轻按一次



音量-

轻触左耳机一次



.

轻按一次



接听电话

轻触任一耳机两次



..

轻按两次



..

轻按两次



结束通话

轻触任一耳机两次



..

轻按两次



..

轻按两次



拒接来电

触摸并按住任一耳机2秒



—

触摸并按住



—

触摸并按住



开启ANC降噪

长按右耳机2秒



—

长按两秒



语音助手

轻按右耳机四次



....

轻按四次

注意事项

-  请勿将耳塞式耳机暴露于液体、湿气或蒸气中，因为它们内部装有电子元件和电池。
-  请勿使用研磨性清洁剂清洁新耳塞。如有必要，请用稍微湿润的布擦拭。
-  定期取下并清洁耳塞头，以确保您始终享受最佳的声音。
-  请勿将耳塞暴露在极高或极低的温度下，因为这可能会损坏电池，甚至使塑料部件变形。
-  请勿将耳塞扔进火中。内部电池可能会爆炸。
-  请勿尝试拆卸耳机。耳机内没有用户可自行维修的部件。
-  尽量不要让耳机掉落，并让其远离口袋中的钥匙等尖锐物体
-  仅使用 5V USB 端口为耳机充电，例如手机充电器、笔记本电脑或 PC 充电器
-  切勿以过高的音量听音乐，否则可能会永久损害您的听力。
-  注意周围环境，骑车、开车或在交通中行走时切勿佩戴耳机

保修卡

感谢您选择朗科产品。通过正规渠道购买的朗科产品依法享有国家规定的三包服务。查询具体细则请登录朗科中文网站:<http://www.netac.com.cn>自签收之日起,朗科无线蓝牙/有线耳机配件齐全且无人为损坏,享有七天无理由退货,十五天换货,一年非人为有性能故障保修服务(有线耳机一年半)。

用户资料

产品名称		联系电话	
产品SN码		联系地址	
顾客姓名		购买日期	

保修记录

保修日期	故障及处理方法	完成日期	顾客签名

PACKAGE CONTENTS



TW02A × 1



USB-C charging cable x 1



Charging case x1



Ear-tips:S X 2,L X 2

User manual x 1

SPECIFICATIONS

- Model:TW02A
- Charging Case:600mAh
- Charging Time:2H
- Speaker Unit:φ11mm
- Input:DC5V= 350mA
- Earbud Battery:40mAh
- Play Time:7H(Earbuds) +42H(Charging Case)
- Product Weight:45±10g
- BT Distance:15

CHARGING CASE SPECIFICATIONS

- Charging case weight:41.5g
- Charging port:USB-C

POWER ON/OFF

POWER ON: The earbuds will automatically turn on when you open the charging case.

POWER OFF:The earbuds will automatically turn off once placed inside the charging case with the lid closed

PAIRING

1. Open the charging case.
2. Turn on the Bluetooth of your device.
3. Select 'Add Device', and from the list of devices select 'Netac TW02A'.
4. Your Netac TW02A are now paired with your device and ready to use.



Note: Your Netac TW02A will automatically connect to the last paired device as soon as you take them out of the charging case.

RESET

- Make sure your earbuds are fully charged.
- On your paired devices, delete/remove Netac TW02A Buds from the list of paired devices in the Bluetooth menu.
- Take out the earbuds from the charging case.
- When the paired device is not connected, press any headset for 10 seconds, red and white, the light flashes three times at the same time, then prompt "Factory reset successful" and turn off.
- Close the charging case and repeat the pairing process.

CHOOSING YOUR EART-TIP SIZE

Follow the images and chart to learn how to wear earbuds in the right manner.



Earbuds are fitted with medium-sized tips. However, if you find that they don't fit perfectly, please remove them and try the small and large ear-tips.

EARBUDS CHARGING

Place both earbuds inside the charging case to charge them.

Indication (on case)

- Solid red LED = Charging



Charging

CASE CHARGING

Charge the case via the supplied Type-C charging cable, preferably from any PC or laptop as compared to a USB charger.

Indication (on case)

- Flashing red LED = Charging



Charging

- Solid red LED = Fully Charged



Fully Charged

CONTROLS

- | | | | |
|--|---|---|--|
|  | Play/Pause
Tap either earbud twice |  ..
Tap twice |  ..
Tap twice |
|  | Previous Song
Tap the left earbud thrice |  ...
Tap thrice | |
|  | Next Song
Tap the right earbud thrice | |  ...
Tap thrice |
|  | Volume +
Tap the right earbud once | |  .
Tap once |
|  | Volume -
Tap the left earbud once |  .
Tap once | |
|  | Answer Call
Tap either earbud twice |  ..
Tap twice |  ..
Tap twice |
|  | End Call
Tap either earbud twice |  ..
Tap twice |  ..
Tap twice |
|  | Reject Call
Touch and hold either earbud for 2 seconds |  —
Touch and hold |  —
Touch and hold |
|  | ANC Mode
Touch and hold either earbud for 2 seconds | |  —
Touch and hold |
|  | Voice Assistant
Tap right earbud 4times | | 
Tap 4 times |

ATTENTION

-  Do not expose the earbuds to liquids, moisture or humidity as they have electronics and batteries inside.
-  Don't use abrasive cleaning solvents to clean your new earbuds. Wipe them down with a slightly damp cloth if and when necessary.
-  Remove and clean the earbud tips regularly to ensure that you always enjoy the best sound possible.
-  Do not expose the earbuds to extremely high or low temperatures as this may damage the battery or even deform the plastic parts.
-  Do not throw the earbuds in a fire to dispose of them. The internal battery may explode.
-  Do not try to disassemble your earbuds. There are no user-serviceable parts inside it.
-  Try not to drop the earbuds and keep them away from sharp objects such as keys in your pockets.
-  Only charge your earbuds from 5V USB ports such as phone chargers and laptops or PC chargers.
-  Never listen to music at a high volume or you may permanently damage your hearing.
-  Pay attention to your surroundings and never wear any earbuds while riding, driving or walking in traffic


FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

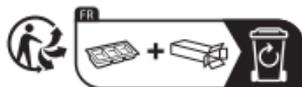

Points de collecte sur www.quefairedemesdechets.fr